MICROWAVE OVEN TECH SHEET


CAUTION

Disconnect from Electrical Supply Before Servicing Unit

PRECAUTIONS TO BE OBSERVED BEFORE AND **DURING SERVICING TO AVOID PROSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- A. Do not operate or allow the oven to be operated with the door open.
- B. Make the following safety checks on all ovens to be serviced before activating the Magnetron or other microwave source, and make repairs as necessary
- 1. Interlock operating.
- 2. Proper door closing 3. Seal and sealing surfaces (Arcing,
- wear and other damage.) 4. Damage to or loosening of hinges
- and latch. 5. Evidence of dropping or abuse.
- Before turning on microwave power for any service test or inspection within the microwave generating compartments
- check the magnetron. Waveguide or transmission line. And cavity for proper alignment, integrity and connection.
- D. Any detective or mis-adjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired. replaced. or adjusted by producers designed in this manual before the oven Is released to the owner.
- E. A microwave leakage check to verify Compliance with the Federal performance Standard should be performed on each oven prior to release to the owner
- F. Do not attempt to operate the oven if the door glass is broken.


Parts Layout

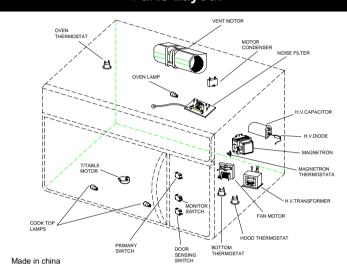

Schematic Diagram


Warning: Power must be disconnected before servicing this appliance

MODEL NO.: (C)/FMV152K; C/FFMV162L;C/FFMV164L

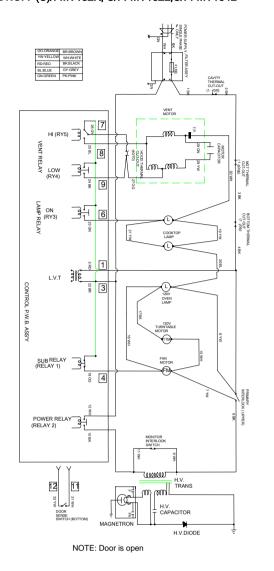

Wiring Diagram

Warning: Power must be disconnected before servicing this appliance MODEL NO.: (C)/FMV152K; C/FFMV162L;C/FFMV164L

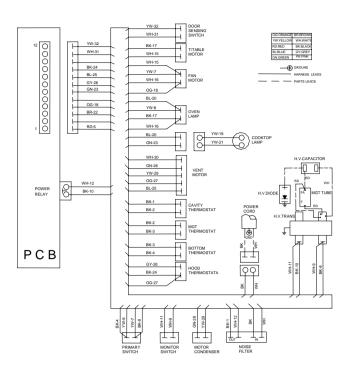

NOTE: For servicing replacement use 16GA,105°C thermoplastic covered wire except for high voltage leads or as noted on special leads.

Switch Chart

SWITCH	CHECK BY	DOOR	DOOR CLOSE
Primary Interlock	Disconnect the wires at the Primary Interlock Switch. Check from the common terminal to the normally opened terminal.	_	+
Door sensing Interlock	Disconnect the wires at the sensing interlock Switch. Check from the common terminal and Normally closed terminal	_	+
Monitor Interlock	Disconnect the wires at the Monitor Switch. Check from the common terminal and Normally closed terminal .	+	_

(+) CONTINUITY (-) NO CONTINUITY DOOR Door Monitor Sensing Interlock DOOR CLOSE Primary Interlock Door Monitor Sensing

Note: These Diagrams are not intended to show a complete circuit, they represent the position of switches during "DOOR OPEN" and "DOOR CLOSED". (continuity checks only)

OUTPUT POWER OF MAGNETRON

CAUTION MICROWAVE RADIATION

TO MICROWAVE RADIATION FROM MICROWAVE GENERATOR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

The output power of the magnetron can be measured by performing a water temperature rise test. Equipment needed:

- Two 1-liter cylindrical borosilicate glass vessel (Outside diameter 190 mm)

 One glass thermometer with mercury column
 NOTE: Check line voltage under load. Low voltage will lower the magnetron output.

 Make all temperature and time tests with accurate equipment.
- 1. Fill the one liter glass vessel with water.
 2. Stir water in glass vessel with thermometer, and record glass vessel's temperature ("T1", 10±1°C).
- 2. Sit water in glass vessels with thembeted, and bedrug glass vessels eithperature (TT, 102 T G).

 3. After moving the water into another glass vessel, place it in the center of the cooking tray.

 Set the oven to high power and operate for 47 seconds exactly.

 (3 seconds included as a holding time of magnetron oscillation)

 4. When heating is finished, stir the water again with the thermometer and measure the temperature ("T2").

 5. Subtract T1 from T2. This will give you the water temperature rise. (△T)

 6. The output power is obtained by the following formula;

 Output to 14.874.0009 △T.0.555.Mey(T2, T0).
- Output = $\frac{4.187 \times 1000 \times \triangle T + 0.55 \times Mcx(T2-T0)}{42}$
- 45 : Heating Times (sec)
 (3 seconds included as a holding time of magnetron oscillation.)
 4.187 : Coefficient for water

- 4.167 : Coefficient C. 1991
 1000 : Water (cc)
 △T : Temperature Rise (T2-T1)
 T0 : Room Temperature
 Mc : Cylindrical borosilicate glass weight
- 7. Normal temperature rise for this model is 9.9 °C to 10.3 °C at 'HIGH'. NOTE 1: Variations or errors in the test procedure will cause a variance in the temperature rise.
- Additional power test should be made if temperature rise is marginal.
- NOTE 2: Output power in watts is computed by multiplying the temperature rise (step 5) by a factor of 91 times the of centigrade temperature.

Component tests

WARNING

Personal injury/Pro

Disconnect the power supply cord
from the outlet before removing the
outer cabinet from the unit.
Discharge the high voltage capacitor
and remove the fead wires from
The primary winding of the high voltage
transformer before conducting any of
the following tests.
Conduct all operation tests with 1 liter
of water in the oven.
Conduct a microwave energy test

Personal injury/Product Hazard after performing any test or repairs to the microwave. Check that all wire leads are in the Correct position before operating The microwave oven.
Grasp wire connectors when removing the wire leads from microwave parts.

Failure to follow these instructions marresult in electrical shock or other Personal injury or in product damage

High voltage components

Transformer Secondary Filament Terminal Feminals Primary Terminal	1. Remove wire leads. 2. Measure resistance. (ohm meter scale: Rx1) Primary winding Secondary winding Interest winding 3. Measure resistance. (ohm meter scale: Rx1000) Primary winding to ground Interest winding to ground	Approx. 0.334+2% ohm. Approx. 118.7+2% ohm. 0 ohm Normal: Infinite. Normal: Infinite.	
Magnetron Cooling Pins	1. Remove wire leads. Install the magnetron seal in the correct position. Check that the seal is in good condition. 2. Measure resistance. (ohm meter scale: Rx1) Filament winding 3. Measure resistance. (ohm meter scale: Rx1000) Filament to chassis	Normal: Less than 1 ohm Normal: Infinite.	
Capacitor	1. Remove wire leads. 2. Measure resistance .(ohm meter scale: Rx1000) Terminal to terminal Terminal to case	Normal: Momentarily indicates several ohm, and then gradually returns to infinite.	
Diode Some inexpensive Meters may indicate Infinite resistance in both directions	Measure continuity. Forward .(ohm meter scale: Rx1000) Measure continuity. Reverse .(ohm meter scale: Rx1000)	Normal: Continuity. Abnormal: Infinite. Normal: Infinite. Abnormal: Continuity.	
Ventilation Motor	Remove wire leads. Measure resistance .(ohm meter scale: Rx1) level: White and Blue wire	Approximately 35.2 ohms	

Other component tests

Components	Test	Results
T/Table Motor	Remove wire leads. Measure resistance, (ohm meter scale: Rx1000)	Normal: Approximately: 3.3k ohms
Fan Motor	Remove wire leads. Measure resistance. (ohm meter scale: Rx1)	Normal: Approximately: 97.4 ohms